
Instruction Manual JOHN FLUKE MFG. CO., INC.

PLEASE RETURN TO LIBRARIAN

ORG. 6-7744 M.S. 27-14

manual #

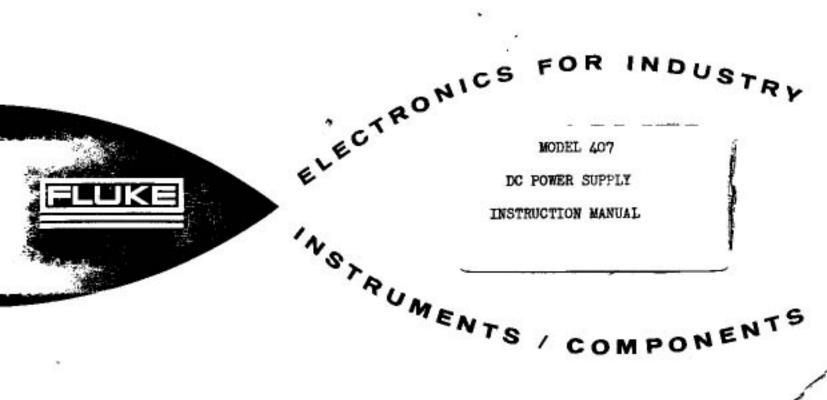

JOHN FLUKE MANUFACTURING CO., INC. P.O. BOX 7428, SEATTLE 33, WASHINGTON

PLEASE RETURN TO LIBRARIAN ORG. 6-7744 M.S. 27-14 manual

MODEL 407
DC POWER SUPPLY
INSTRUCTION MANUAL


INSTRUCTION MANUAL


FOR

® MODEL 407

HIGH RESOLUTION DC POWER SUPPLY

SERIAL NUMBER 1049 AND ABOVE

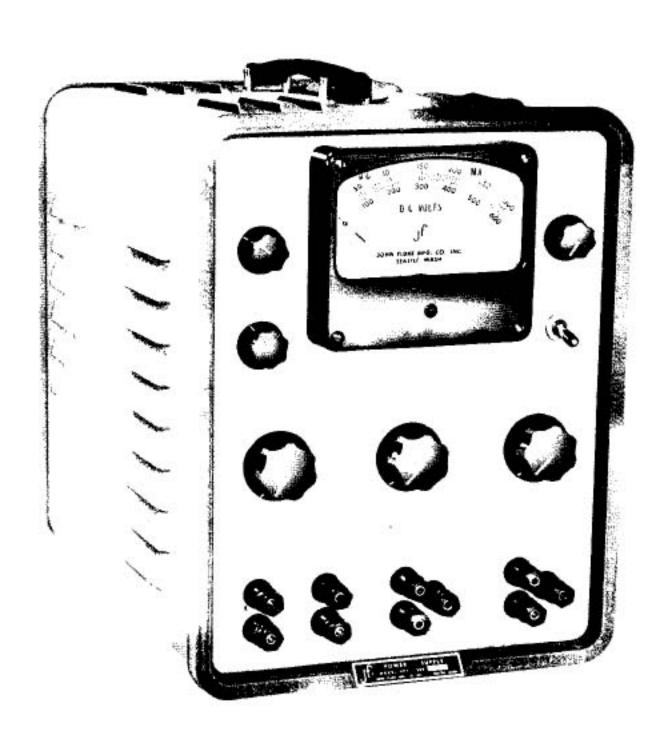

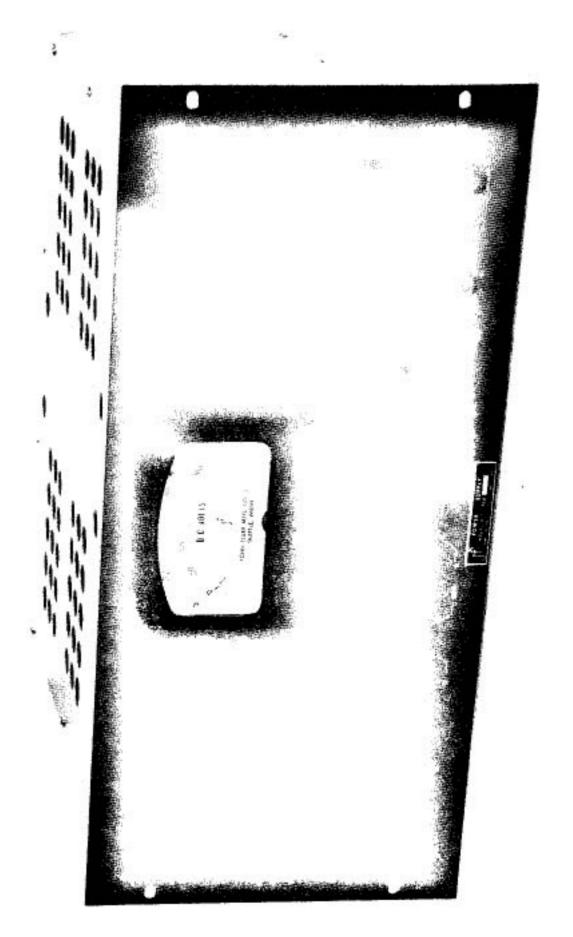

SECTION I.

MODEL 407 HIGH RESOLUTION DC POWER SUPPLY

SPECIFICATIONS

Input Voltage: 117/234 volt, 50/60 cycles single phase Input Power: 425 watts at full load, 100 watts standby

Main Output Voltage: 0 to 555 volts

Main Output Current: 0 to 300 milliamperes

Line Regulation: 0.01% or 50 mv, whichever is greater for line change

from 105 volts to 130 volts

Load Regulation: 0.01% or 50 millivalts, whichever is greater, for

300 milliampere load change

Output Impedance: Less than 0.5 ohm dc to 100 kc at full load

Stability: 0.01% or 50 millivolts per hour

0.05% or 250 millivolts per day

Ripple: I millivolt RMS or less

Meter Ranges:

Auxiliary Outputs:

Voltage Resolution: 2 millivalts over entire range
Voltage Controls: 0 to 500 volts in ten 50 volt steps
0 to 55 volts, smoothly variable

0 to 0.55 volts, smoothly variable

Colibration Accuracy: Better than 0.5% from 50 to 500 volts when set up

by 0 - 500 volt control

Output Polarity: Either plus or minus side of main output may be

grounded, or both sides may be left floating. Two

supplies may be series connected

Meter: Illuminated 4-1/2 inch. Selectively reads main

output voltage, bias voltage, main output current 0 - 600 volts, 0 - 60 volts, 0 - 300 milliamperes (DC) 0 to minus 250 volts and 0 to minus 25 volts,

variable via BIAS control. Maximum output 5 milliamperes at minus 250 volts. Plus side connected to minus side of main output. Line regulation 0.02%, 1 millivolt maximum ripple. Output impedance 0 to 10,000

ohms, depending on setting of BIAS control. At 250 volt setting, load regulation 0.01% for 5 ma load change. (AC) Two independent 6.3 volt, 5 ampere outputs. May be series or parallel connected. Each insulated for 1500

volts RMS to ground and each other.

Output Connectors: Binding posts on 3/4 inch centers. Also terminal strip

at rear on rack model

Mechanical: Portable Model: 9-3/4" W x 13" H x 14" D, 32 lbs.

Rack Model: 19" W x 8-3/4" H x 16" D, 32 lbs.

MODEL 407 HIGH RESOLUTION D-C POWER SUPPLY

TABLE OF CONTENTS

Section 1.

SPECIFICATIONS

Section II.

GENERAL DESCRIPTION	1	
INSPECTIONPg.	1	
TRANSFORMER PRIMARY CONNECTION Pg.	1	
INITIAL OPERATION	1, 3	2
USE AS GENERAL PURPOSE LABORATORY SUPPLY Pg.	2	
TO USE FOR METER CALIBRATION Pg.	3	
CIRCUIT DESCRIPTION	3,	4
NOTES ON CIRCUIT OPERATIONPg.	4, :	5
MAINTENANCE NOTES Pg.	5, (6
TROUBLE SHOOTING HINTS Pg.	6,	7
RECALIBRATION INSTRUCTIONS Pg.	8	
Section III.		
LIST OF REPLACEABLE PARTS	1 -	5
Section IV.		

WARRANTY

CIRCUIT DIAGRAM

SHORT FORM CATALOG

SECTION II.

MODEL 407 HIGH RESOLUTION DC POWER SUPPLY GENERAL DESCRIPTION

The Model 40% is no extensity stable highly regulated source of direct current in the 0 to 500 cold, to 100 cold improve ourse, it is in light investigh, highly problem static incorporation and incorporation an

A dual range negative bios output with excellent resolution, and dual 6.3 volt, 5 ampere outputs phased to permit series or parallel operation are also provided, making the Model 407 on ideal laboratory or general purpose power supply, as well as a high resolution dict source for sener callibration.

INSPECTION

This instrument has been thoroughly checked and tested before being shipped from the factory. Upon receipt of the instrument; inspect carefully for any damage which may have been incurred in Iransi? Refer to the WARRANTY section of this manual for the procedure to be followed if any shipping damage has accurred.

TRANSFORMER PRIMARY CONNECTION

The gover invariences II in the Model 407 has a dout primary. For operation from III valid power like the respiration as convected in parallel, for operation from 224 volt gover like the respiration as convected in parallel, for operation from 224 volt gover like the two primaries are connected in series. Unless otherwise specified the transformer in this unit is convected for 117 volt operation. Unless with transformer connected for 124 volt operation, unless with transformer connected for 224 volt operation. One of the transformer connected for 224 volt on the unit of the connected for 224 volt on the unit of the connected for 224 volt on the connected for

To change connection of primaries, remove this instrument from its case and refer to chart printed on the left side sheet. When aperated from 234 volt a-c main, change 5 ampere slo-blo fuse to 3 ampere instant blaw fuse.

INITIAL OPERATION

Connect the instrument to single phase 50 or 60 cycle source of proper line voltage. Set up output voltage desired on the three calibrated output voltage controls.

Se MTR. CKT. witch to HV OFF position and those PVR witch to DN position. Mares thould light up. After 30 seconds from MTR. CKT. witch to HV position and the desired voltage will appear at the 0 to 535 volt output point at the bottom right vide of panel and will be read on the from position after. This supply has collabored output voltage centrels accounts to better than 0.5%, whereas the posal mater is a 2% instrument. Since the state of the position of the the maters not re-ord in error by or position. 31 2 volt providence on the scale and stall [16] in within the meter manufacturer's specifications. Consequently, it should not be used for setting up precise voltages; rely on the calibrated controls. Should a large discrepancy between meter reading and dial settings appear, refer to the SERVICE NOTES & RECALI-REATION settings of this book.

TO USE AS GENERAL PURPOSE LABORATORY SUPPLY

Four different outputs are available at four sets of binding posts on the Model 407. All four may be used simultaneously of maximum outputs over the entire 105 to 130 volt range of line voltage, no derating is necessory under any conditions. These outputs are:

1. On 555 vehi fri c at 200 millimyers morimum, wordlashe at right head binding pears. This output is adjusted of an her was estilizated controls. Construkt on a significant control of the control o

Output voltage may be removed from binding posts by turning the MTR. CKT, switch to HV OFF. This switch opens the circuit between regulator and post-tive binding post. An anti-arcting circuit blaces the output tubes to cut off before the output circuit is interrupted, thus preventing switch arcling.

- 2. O to minute 250 with a 5 still Emperor reactions, available at course three binding pairs. The course is desirable of the BAC course is not liquid of the means of the pairs of the section of the BAC course is not liquid of the means of the section of the
- 3,4. 6.3 voits a-c at 5 amperes unregulated, available at the two pain of binding pasts on left side of poets. These wholings are inscised for 1500 voits RMS to chamist and each other. They are except belonced and any be settler a proteil accounted to give 12.6 voit at 3 amperes or 6.3 voits at 10 amperes. The lower binding part of each part in makes by all or a minute to indicate this start of each winding, for 12.6 voits consect the top binding part of one part in the bottom part of the other pair. For 6.3 voil. (1) demans output context top to by and the part of the other pair. For 6.3 voil. (1) demans output context top to by and

TO USE FOR METER CALIBRATION

The Model 407 may be used for the direct calibration of d-c voltmeters to an accuracy of better than 0.5% at 10 cardinal 50 volt points from 50 through 500 volts. An additional 55 volts of range is available via the 0 to 55 volt control. Used in combination with the John Fluke Model 801 it may be used to calibrate d-c instruments to an accuracy of 0.05% over the range of 0.1 volt to 500 volts.

For direct calibration, set up the desired voltage on the three calibrated voltage controls and connect the instrument to be calibrated to the 0 - 555 volt binding posts. The ten 50 volt steps are accurate to considerably better than 0.5%. The voltage change effected by the 0 to 55 volt control is accurate to better than 5% while the voltage change effected by the 0 to 0.55 volt control is accurate to better than 5%. Simple arithmetic will enable the user to compute the maximum error at any setting.

Since the accuracy of an instrument of this type is dependent almost entirely upon the accuracy of the precision resistors used in the main sampling string (assuming the proper sampling string current, proper reference voltage and adequate error amplifier gain) it will at ance be appearent that the use of 0.25% resistors will certainly produce better than 0.5% calibration accuracy, particularly if the internal calibration controls are occasionally adjusted (every few hundred hours) to compensate for ageing of the reference and equating tubes.

For calibration of high precision indicating instruments such as 0.25% laboratory models we recommend using the Model 407 in conjunction with the Fluke Model 801 (or 800). In this case the Model 407 serves as a high resolution voltage source and the Model 801 Potentiometric D-C Voltmeter serves as a 0.05% voltage standard. These instruments are described in the Short Form Catalog at the rear of this instruction manual.

CIRCUIT DESCRIPTION

Essentially the supply consists of nine main elements, which are:

- An unregulated, filtered d-c high voltage supply the output of which is applied to the plates of
- (2) Pentode series passing tubes (cathode followers) whose control grids are driven by an error signal amplifler and at whose cathodes appears the regulated output which is applied to
- (3) A precision wirewound constant current voltage divider where it is attenuated to the level of a reference voltage and compared thereto by
- (4) A differential amplifier. Any difference between the reference and sample voltages is amplified by the differential amplifier and applied to
- (5) A cathode follower-pentode amplifier where the amplified error signal is still further amplified and applied to the grids of the series passing tubes to offect correction of d-c level and maintain a very low d-c output impedance.
- (6) An a-c feedback loop for reduction of residual ripple component and a-c output impedance.

- (7) A high stability negative 250 volt reference supply which shares the same reference tube with the main regulator. Developing a constant minus 250 volts, it furnishes an absolutely constant current of 2.15 milliamperes to the reference tube. The 86 volt sample of the main output voltage is dropped this 250 volts below the 0 volt bus of the main output in order to furnish polarizing potentials for the main differential and pentode amplifier stages. This is obviously necessary since the grids of the main series passing tubes must be driven a maximum of 60 volts negative with respect to the cathodes. This puts them well below the zero volt bus when operating at a few volts main output.
- (8) An unregulated screen grid supply which "floats" between cathode and screen grids of the pentode series passing tubes.
- (9) A 4-1/2 inch meter and associated function and range switches.

Element 1 consists of silicon diode rectifiers RE1 through RE8, capacitors C1 and C2, and bleeder resistors R1 and R2. The high voltage winding which furnishes power to this full wave bridge rectifier is tapped and switched by a section of the 0-500 volt control. Thus the voltage drop and hence the power dissipation of the series passing tubes is minimized.

Element 2 consists of V1, V2, and V3.

Element 3 is comprised of S2B and associated precision wirewound resistors R33 through R42, R43, R44, and wirewound potentiometers P2, P3 and P4.

Element 4 consists of V5 and associated components.

Element 5 is composed of V4 and associated components.

Element 6 includes C10, R28 and output capacitors C3 and C4.

Element 7 consists of rectifier filter RE11 through RE12 and C6, series passing tube V8, cathode follower-triode driver amplifier V7, differential amplifier V6, reference tube V9, and associated components. The 86 volt sample of the 250 volt output is derived from precision wirewound resistors R15 and R16 and wirewound potentiameter P1. Constant current for the reference tube is insured by precision wirewound dropping resistor R21. A-C feedback and amplifier stabilization is accomplished by C8, R47 and output capacitor C11.

Element 8 includes RE9 through RE10 and C5.

Element 9 consists of M1, S3, S4, R8, R9 and shunt R10.

NOTES ON CIRCUIT OPERATION

The excellent stability of the Model 407 is due chiefly to the use of highest quality precision wirewound resistors in sampling strings, a very stable reference element (Type 565) reference tube) operated at constant current and carefully designed equating elements (differential amplifiers V5 and V6).

The heater current of these differential amplifiers is regulated by an Amperite type 9-7 ballast tube, V10, which greatly improves the regulation of the supply against large fluctuations in line voltage.

Gain of the pentode driver amplifier is increased by returning the plate load resistor R12 to a point 70 volts above the cathodes of theseries passing tubes. This is accomplished via R11 and neon regulator V13. With this arrangement the plate current can never decrease below 150 microamperes and the Gm of the tube is thereby increased considerably.

An arc prevention circuit is used in connection with MTR. CKT. switch. This circuit functions as follows: The space between the HV OFF position and the HV position is 60 degrees, whereas the space between all other adjacent switch positions is only 30 degrees. As the switch knob is rotated from the HV position counterclockwise toward the HV OFF position the rotor of the "D" section connects the grids of the main series passing tubes to a point 60 volts below the zero bolt bus. This occurs as the switch rotor passes through the first 30 degrees of its rotation toward the HV OFF position. The output voltage immediately falls toward zero. The afrault to the positive output post established via the "A" sections is still maintained at this point and for a few degrees beyond (both the "D" and "A" sections of S3 have shorting type rotors). As the knob is rotated through the second 30 degrees of travel toward the HV OFF position the circuit to the positive binding post is opened but by this time the output voltage is at or near zero so there is little or no energy available to couse switch arking. Neon bulbs V11 and V12 are connected between control grids and cathodes of the series passing tubes to prevent the voltage between these elements exceeding 140 volts as the MTR. CKT, switch is thrown to the HV OFF position with the supply operating at high output valtages.

MAINTENANCE NOTES

Very little maintenance, other than routine cleaning and tube replacement, will be required with this supply. If replacement of V5 is necessary a tube should be selected which will give 50 millivolts or less regulation at 500 volts main output against 20% line voltage change (105 to 130 volts). In common with all differential da amplifiers, these tubes are somewhat sensitive to heater voltage change. Tubes with poor balance between halves or excessive grid current may cause excessive output voltage offset with line voltage changes (poor line regulation). These should be discarded (or used for V7) in favor of tubes which perform properly. Excessive or prolonged output voltage drift sometimes results when a new un-aged 12AX7 is used. This drift will frequently clear up after a few hours operation; if not, it should be replaced. If the heater voltage regulation of these tubes exceeds 0.5 volt for a line voltage change from 105 to 130 volts the ballast tube V10 should be replaced.

Excessive drift may be caused by a defective reference tube V9. The life of these is usually in excess of 2,000 hours but as they approach end of life their running voltage tends to drift excessively, which causes drift in both the minus 250 volt and the ma in outputs. Should this occur, replacement will be necessary. We recommend either an RCA or Amperex tube in this case.

Aging of the reference tube and equating tubes will cause slight calibration error. For maximum accuracy check the calibration every two or three hundred hours against a good voltage standard such as a John Fluke Model 801 or a Leeds & Northrup type K potentiometer with suitable volt boxes. See instructions under RECALIBRATION section of this manual.

TROUBLE SHOOTING HINTS

 NO OUTPUT. Check for open heater in one of the three type 807 series passing tubes. Heaters of these tubes are connected in series so that if one fails all three will lose emission. This prevents the remaining two from being badly overloaded. A 0 - 20 volt ac meter connected between pins 1 and 5 of each tube in turn will read 20 volts across the tube with open heater.

Check all tubes to see that they are lit. Check plate voltage of main supply – should read approximately as shown in table on circuit diagram. Check screen voltage – should read as shown. Check resistance from slider of P2 to negative 250 volt bus; if either P2 or R44 is open, output voltage will be zero. Check for shorted feedback capacitor C10 – check tube element potentials – these should be within 10% of the values shown on the circuit diagram. Check for open resistors R3, 4 and 5.

 INCORRECT OUTPUT VOLTAGE. If only a slight error is noted over the entire 555 volt range, unit may only require recalibration. If error is large it is usually due to an out-of-tolerance wire-wound resistor in one of the two sampling strings.

Check main supply by setting 0 to 55 volt and 0 to 0.55 volt controls to zero and decreasing the 0 to 500 volt control one step at a time. If error disappears at some point the trouble is an out-of-tolerance resistor just above the switch position where error disappears. If error persists at all positions of the 0 - 500 volt control, check output of negative 250 volt supply by setting BIAS control fully clockwise, and checking voltage across minus 250 volt binding posts. Should read within 1 volt of 250 volts - if error exceeds this trouble is probably one of the two sampling resistors R15 and R16. If both are okay check all element potentials to determine source of trouble. Check also for a leaky feedback capacitor in either supply - C8 and C10. Also check accuracy of R43 and R44.

3. COMPLETE LOSS OF CONTROL. Output rises to within a few volts of main supply unregulated voltage and is variable with line voltage. Check for a gassy or shorted series passing tube. Check also for loss of emission in V4 or for a short in one section of V5. A systematic check of element potentials should pinpoint the defective component if trouble is not found to be a defective tube.

- OSCILLATION. Check for open feedback capacitor C10 or C8. Check also for open main output capacitor C3 or C4 in main supply, C11 in auxiliary supply.
- POOR REGULATION. If poor load regulation, check for weak driver amplifier V4.
 If poor line regulation check minus 250 volt supply line regulation. If it is poor it will affect regulation of main supply. Poor line regulation in either supply is usually due to a defective differential amplifier tube or a defective ballast tube V10.
- EXCESSIVE RIPPLE. Check auxiliary minus 250 volt supply ripple. If okay, trouble
 is probably defective feedback capacitor C10 or heater cathode leakage in V4. Check
 for defective filter capacitor C1 or C2.
- 7. OUTPUT ERRATIC. This is usually caused by a defective wire-wound resistor in one of the two sampling strings. If erratic condition appears in both main output and minus 250 volt output the trouble is probably in R15 or R16. If only in main output, determine if it is present at all outputs or disappears below certain position of the 0 to 500 volt control. If present at all outputs, trouble is either with R43 or R44. If it disappears at some point, the resistor at the switch position just above that point is defective. Trouble is generally caused by a few turns shorting out intermittently in one of the resistors. If all resistors are okay check for defective feedback capacitors C10 and C8. Check all tubes and finally check for some intermittent component.
- 8. POOR STABILITY. Long slow drift in output voltage beyond specified value of 0.05% ar 500 millivolts per day is often caused by the reference tube V9 approaching end of life. Replace with a new one and allow unit to run for an hour before making stability check. Poor stability may also be caused by a defective differential amplifier tube V4. Trouble may be drift in the minus 250 volt bias supply. Drift in the bias supply will cause drift in the main supply but not vice versa. If both drift, check bias supply differential amplifier tube V5 as well as feedback capocitors in both supplies C8 and C10.
- 9. FUSE BLOWS REPEATEDLY. Usually caused by shorted main filter capacitors C1 and C2. If one of these shorts the full voltage appears across the other one causing it short also. This, of course, causes fuse to blow. Chief cause of capacitor shorting is failure of one of the two bleeder resistors R1 and R2. If one of these opens, full voltage appears across the opposite capacitor causing it to short which in turn causes the other capacitor to short. Never replace these capacitors without first checking both bleeder resistors R1 and R2.
- 10. OPEN RESISTOR R45. Caused by shorted C5 or internal tube short. This resistor is designed to open up thus protecting transformer winding and selenium rectifiers. Check C5 before replacing.
- OPEN RESISTOR R46. Caused by shorted C6. This resistor, like R45, is designed
 to open up in case of capacitor short thus protecting transformer winding and
 selinium rectifiers.

RECALIBRATION INSTRUCTIONS

In order to properly calibrate the Model 407 a voltmeter of 0.1% accuracy should be used. The John Fluke Models 800 or 801 (with accuracy of 0.05% are ideal for this purpose.

- Allow instrument to warm up for one-half hour. Then set BIAS control fully clackwise and slide instrument far enough out of the case to gain access to printed circuit board. Adjust PI for output of minus 250 volts as measured at BIAS terminals on front of instrument.
- Set 0 to 55 volt and 0 to 0.55 volt controls to zero and set 0 to 500 volt
 control to 500 volts. Adjust P2, the lower screw-driver adjust control, on
 the right hand printed circuit board, for output of 500 volts.
- Set 0 to 500 volt control to zero and check output; adjust P1 (if necessory)
 to bring output to zero or a few millivolts negative. Recheck output of minus
 250 volt supply. It should still be within a volt or two of minus 250.
- 4. Set 0 to 500 valt control all the way clackwise again and recheck 500 valts. Touch up P2 again for maximum accuracy and then go back to zero and trim PI for zero output. If all of the resistors in the main string are within 0.25% tolerance, one or two readjustments of PI and P2 will bring unit into excellent calibration over all 11 positions of the 0 to 500 valt control.

SECTION III.

MODEL 407

LIST OF REPLACEABLE PARTS

CIRCUIT SYMBOL	DESCRIPTION	FLUKE STOCK NO.
C1,2	Capacitor, electrolytic 90 mfd, 500 v	CE17
C3,4,11	Capocitor, electrolytic 16 mfd, 450 v	CE3
C5	Capacitor, electrolytic 40 mfd, 450 v	CE4
C6	Capocitor, electrolytic 20 mfd, 500 v	CE16
C7	Capocitor, poper, printed circuit type 0.01 mfd, 400 v	CP16
C8	Capacitor, paper 0.01 mfd, 600 v	CP7
C9	Capocitor, poper 0.002 mfd, 1600 v	CP9
C10,12	Capacitor, paper 0.047 mfd, 1000 v	CP12
C14	Capacitor, paper 0.022 mfd, 600 v	CP15
C15	Capacitor, paper 0.22 mfd, 400 v	CP2
C16, 17	*Capocitor, mylar 0.01 mfd, 400 v, 20%	CFI
C18	Capacitor, paper 0.022 mfd, 600 v	CP15
C19	Capacitar, ceromic 0.001 mfd, 3000 v	CT16
C21	Capacitor, poper 0.1 mfd, 1 kv	CP31

CIRCUIT SYMBOL	DESCRIPTION	FLUKE STOCK NO.
C22	Capacitor 10 mmfd, 500 v	CT4
C23	Capacitor, 0.1 mfd, 500 v	CT20
C24	Capacitor, paper 0.04 mfd, 1600 v	C P3 5
C25, 26	Capacitor, paper 0.047 mfd, 1 kv	CP12
R1,2	Resistor, wirewound, power 10 k, 10%, 20 w	R10000WA
R3,4,5	Resistor, composition 10 Ω, 10%, 2w	HB1011

CIRCUIT SYMBOL	DESCRIPTION	FLUKE STOCK NO.
R6,7	Resistor, composition 100 k, 10%, 1 w	GB1041
R8	Resistor, deposited carbon 60 k, 1%, 1 w	DR516
R9	Resistor, deposited corbon 600 k, 1%, 2 w	DR626
R10	Resistor, wirewound 0.15Ω approximately (meter shunt)	
R11, 12, 20, 30, 47	Resistor, composition 470 k, 10%, 1/2 w	EB4741
R13	Resistor, composition 27 k, 10%, 1 w	GB2731
R14	Resistor, composition 220 k, 10%, 1/2 w	EB2241
R15,43	Resistor, wirewound, precision 144 k, 0.25%, 1 w	PR619
R16,21	Resistor, wirewound, precision 76 k, 0.5%, 1/2 w	PR59
R17, 18, 19, 28	Resistor, composition 680 k, 10%, 1/2 w	EB6841
R22,23	Resistor, deposited carbon 1 m, 1%, 1/2 w	DR71
R24	Resistor, deposited carbon 450 k, 1%, 1/2 w	DR625
R25,26	Resistor, composition 56 k, 10%, 1 w	G85631
R27	Resistor, composition 270 k, 10%, 1/2 w	GB2741
R29	Resistor, composition 150 k, 10%, 1/2 w	EB1541
R31	Resistor, deposited carbon 10 k, 1%, 1/2 w	DR51


CIRCUIT SYMBOL	DESCRIPTION	FLUKE STOCK NO.
R32	Resistor, deposited carbon 90K, 1%, 1 W	DR514
R33 thru 42	Resistor, wirewound precision 45K, 0.25%, 1/2 W	PR516
R 44	Resistor, wirewound precision 76K, 0.25%, 1/2 W	PR517
R45, 46	Resistor, composition 56Ω, 10%, 1 W	GB5601
R48	Resistor, wirewound 10 Ω, 10%, 5 W	R10WA
R50 thru 57	Resistor, composition IM, 10%, 1/2 W	EB1051
R58 thru 60	Resistor, composition 1.5K, 10%, 1/2 W	EB1521
R61, 6 2	* Resistor, composition 3.3K, 10%, 1/2W	EB3321
R63	Resistor, composition 68K, 10%, 1/2 W	EB6831
P1, 2	Potentiometer, wirewound 5K, 10%, 2W	P5000A
P4	Potentiometer, wirewound 500 Ω, 2%, 2 W	P500AA
P5, P3	Potentiometer, wirewound 50K, 10%, 3 W	P50KB
/1, 2, 3	Tube, tetrode Type 807	807
/4	Tube, triode-pentode Type 6AU8	6AU8
/5, 6, 7	Tube, dual triode Type 12AX7	12AX7
/8	Tube, pentode power amplifier Type 6AQ5A	6AQ5A

CIRCUIT	TO SAID SUPPLIES AND ADDRESS OF THE SAID STATE O	FLUKE
SYMBOL	DESCRIPTION	STOCK NO.
V9	Tube, voltage reference Type 5651	5651
V10	Tube, current regulator Type 9-7	9-7
V11 thru 13	Neon bulb, Type NE2X	X40A
RE1 thru 12	Rectifier, silicon 600 V, PIV, 0.5 amp	RE10
Sı	Switch, toggle, SPST 115/230 volts, 3 amp	ST5
S2	Switch, rotary 2 pole 11 position, 3 deck	SR31
s3	Switch, rotary 4 pole 4 position, 2 deck	SR30
S4	Switch, rotary, momentary 1 pole, 2 position, 1 deck	SR16
мі	Meter, 0-1 ma, 4-1/2" with special scale	M13
F1	Fuse, cartridge, 5 amp Slow blow, for 117 volt operation	F5A
FI	Fuse, cartridge, 3 amp Instant blow for 234 volt operation	F3
TI	Transformer, power	407R-601-0
PI1,2	Lamp, miniature, bayonet base	X34
	Cable, power, 3 conductor #18	X27D
	Fuse holder, bayonet type	X12
	Binding post, black	X7

	STOCK NO
post, red	ΧŻΑ
1-1/2" pointer	X234
l" pointer	X231
ubber mounting	X224
g, line cord relief	X138
, leather	X373
r, flat insulated entiometer mounting	X93
r, shoulder insulated entiometer mounting	X94
er, tube, 1-3/8" base	X14
anode 3/8"	×35
anode, 3/8"	X75
al strip	X105
AN () 7.8 시에 () 전 () 이 () 트립스트 시민 () 전 () 전 () 전 () 전 () () 전 () ()	X120
i	ication plate for rear al strip

^{*}Used on cabinet model only

**Used on rack mounting model only



MODEL 407

TUBE LOCATION CHART - TOP VIEW

WARRANTY

The JOHN FLUKE MFG. CO., INC. warrants each instrument manufactured by them to be free from defects in material and workmanship. Their obligation under this Warranty is limited to servicing or adjusting an instrument returned to the factory for that purpose, and to making good at the factory any part or parts thereof; except tubes, fuses, choppers and batteries, which shall, within one year after making delivery to the original purchaser, be returned by the original purchaser with transportation charges prepaid, and which upon their examination shall disclose to their satisfaction to have been thus defective. If the fault has been caused by misuse or abnormal conditions of operation, repairs will be billed at cost. In this case, an estimate will be submitted before work is started, if requested.

If any fault develops, the following steps should be taken.

- Notify the John Fluke Mfg. Co., Inc., giving full details of the difficulty, and include the Model number, type number, and serial number. On receipt of this information, service data or shipping instructions will be forwarded to you.
- On receipt of the shipping instructions, forward the instrument prepaid, and repairs will be made at the factory. If requested, an estimate of the charges will be made before the work begins, provided the instrument is not covered by the Warranty.

SHIPPING

All shipments of John Fluke Mfg. Co., Inc. instruments should be made via Railway Express prepaid. The instrument should be shipped in the original packing carton; or if it is not available, use any suitable container that is rigid. If a substitute container is used, the instrument should be wrapped in paper and surrounded with at least four inches of excelsior or similar shock-absorbing material.

CLAIM FOR DAMAGE IN SHIPMENT

The instrument should be thoroughly inspected immediately upon receipt. All msterial in the container should be checked against the enclosed packing list. The manufacturer will not be responsible for shortages against the packing sheet unless notified immediately. If the instrument fails to operate properly, or is damaged in any way, a claim should be filed with the carrier. A full report of the damage should be obtained by the claim agent, and this report should be forwarded to John Fluke Mfg. Co., Inc. Upon receipt of this report you will be advised of the disposition of the equipment for repair or replacement. Include the model number, type number, and serial number when referring to this instrument for any reason.

The John Fluke Mfg. Co., Inc. will be happy to answer all application questions which will enhance your use of this instrument. Please address your requests to:

JOHN FLUKE MFG. CO., INC., P.O. BOX 7428, SEATTLE 33, WASHINGTON

